




ANALYTICAL SOLUTIONS

Our monitoring systems can be routinely used in chemical, petrochemical, pharmaceutical, waste disposal and many other industries.

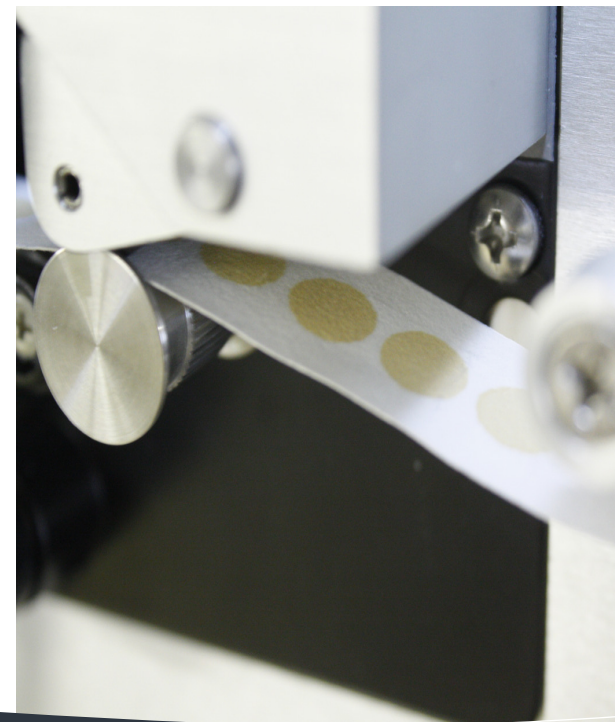

Tape technology : reliable and dependable

C.I. Analytics, the right choice !




2085 Industrial Boulevard
Chambly, Quebec
Canada J3L 4C5
Phone: 450-658-4965
Fax: 450-658-3428
Email: sales@cianalytics.ca
www.cianalytics.com

tape technology

FLY-9024-B

Your investment in C.I. Analytics technology protects your environment from toxic gases and is made safer with our easy-to-use tape detection system.

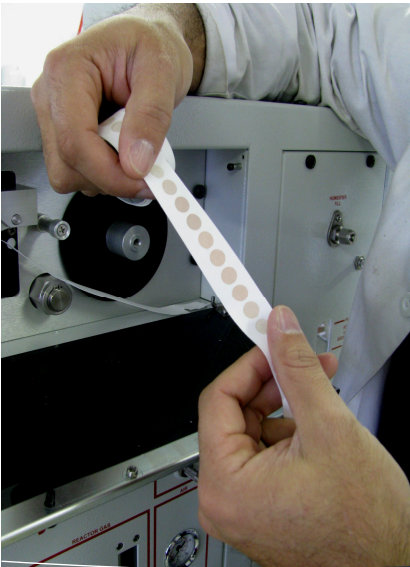

When the tape is exposed to a particular gas, it changes color in direct proportion to the amount of gas that may be present, giving an accurate and fast “proof of analysis”.

Your detector then reads these color changes and determines the gas concentration by comparing them to a standard response curve that has been pre-programmed into the analyzer.

maximum safety & sensitivity without interference

The tape is prepared to react only with the target gas from ppm to low ppb concentrations yet will not react to any other components in the sample, thereby eliminating the possibility of interference and false alarms.

The tapes are easy to install, non-toxic and do not require any known special permits for waste disposal. Simply dispose of used tape in regular trash receptors.

THE BENEFITS OF USING TAPES

- As each tape is safe to handle* and is quick and trouble-free to replace, there are no specific training requirements necessary.
- As the tapes require no special permits or methods of waste disposal, there are no hidden or additional costs associated with your purchase.
- As each tape is gas-tested at the manufacturing stage, they do not require costly on-site, in-field gas calibration or sensor exchange.
- As each tape detects very low-level gas concentrations, they provide early warning signs of contamination and is proof positive of specific impurities in your process streams.

* Safety is comparable to the use of typical household cleaners, wash hands with soap after contact.



We make one commitment

...excellence